


# **PELTON** ROW COMMERCIAL

## UPRIGHT WALL ANCHOR GUIDE

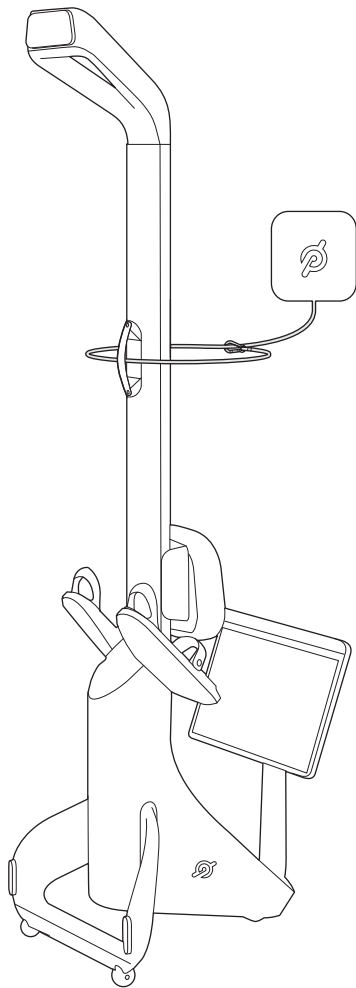

# TABLE OF CONTENTS

WARNINGS AND SAFETY INSTRUCTIONS	4
WHAT'S IN THE BOX	6
WHAT YOU'LL NEED	6
INSTALLATION	7
STORING THE PELOTON COMMERCIAL ROW UPRIGHT	9
MAINTENANCE	15

# WARNINGS AND SAFETY INSTRUCTIONS

**WARNING:** For safe use, read and follow all warnings and instructions in the Owner's Manual, the Upright Wall Anchor Guide, and warning labels. Read all safety information before operating the Peloton Commercial Row. It is the owner's responsibility to ensure that users are aware of all warnings and precautions. Use only as described. Misuse of this equipment may result in serious injury or death. Peloton is not responsible for damage or injury caused by improper use not in accordance with these instructions.

The Peloton Commercial Row is intended for commercial use. Use it only for its intended purpose and in a supervised environment.

**RISK OF PERSONAL INJURY—KEEP PEOPLE UNDER THE AGE OF 16 AWAY FROM THE PELOTON ROW.**

**NEVER** store the Peloton Commercial Row vertically without properly installing and using the Peloton Upright Wall Anchor provided. To avoid risk of serious injury from the Row tipping over, read and follow all the instructions in the Upright Wall Anchor Guide provided.

**WARNING:** For your safety, Peloton recommends professional installation of the Peloton Upright Wall Anchor, such as by a handyman, appliance installer or local hardware retailer.

**WARNING:** Never insert your fingers into the rail groove.

The Upright Wall Anchor is designed to be installed through drywall, on a load-bearing wall into a wooden stud only. Do not install into drywall alone, metal studs, or masonry.

Improper installation of the Peloton Upright Wall Anchor can result in accidental tip-over and cause injury or damage, including but not limited to:

- damage to the walls and paint,
- damage to electrical wiring (and fire damage that may be associated with electrical wiring),
- damage to plumbing (and any water damage associated with plumbing),
- structural damage (both external to the wall and internal to the wall),
- harm or injury to you or those in the vicinity if the Peloton Upright Wall Anchor were to fail, and

- general damage or harm to any things, people or structures in the surroundings of the Peloton Commercial Row and Upright Wall Anchor.

The Peloton Commercial Row must be stored a) flat on the ground with the monitor arm upright OR b) vertically, with the monitor arm folded down, and anchored to a wall using the Peloton Upright Wall Anchor. Storing the Row in any other manner could result in:

- Injury to yourself and/or bystanders,
- Damage to the Peloton Commercial Row or,
- Damage to personal property.

To avoid risk of injury, set up and operate the Peloton Commercial Row on a solid, level surface and in an area inaccessible to children, pets, or anyone else who should not have access to the Row.

The Peloton Commercial Row is intended for users ages 16 and over weighing under 300 lbs/136 kg.

Consult a physician before beginning a new fitness plan. Incorrect or excessive training can result in serious injury.

Always verify that the Peloton Upright Wall Anchor is securely mounted to the wall and check for damage before using. **DO NOT** use the Upright Wall Anchor if any damage is visible. Using a damaged Upright Wall Anchor could result in injury to persons, animals or personal property.

The tether and clip move freely and could present a strangulation hazard. Always wrap the tether securely around the mounting bracket when the Peloton Upright Wall Anchor is not in use.

Never put your fingers near the seat or rail when using or storing the Peloton Row. Exposed moving parts can cause serious injury. Keep clear.

**DO NOT** store any items on the Peloton Row when it is stowed vertically, including but not limited to clothing, materials, workout towels, water bottles, and other accessories.


**SAVE THESE INSTRUCTIONS.**

# WHAT'S IN THE BOX

Before starting assembly, verify that all parts are included and undamaged. Never use damaged parts. If any parts are missing or damaged, contact Peloton's dedicated commercial client support team by visiting: <https://commercial.onepeloton.com/support>



Front Cover

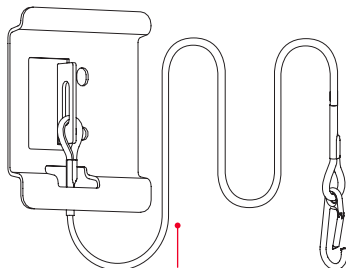


Mounting bracket  
and cable loop assembly



17 mm x 76 mm  
hex lag bolts


# WHAT YOU'LL NEED

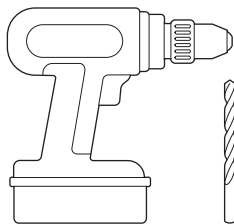

Power drill  
(at least 12V)



6 mm  
drill bit



Stud  
finder



Measuring  
tape



Pencil



17 mm  
hex socket



Socket  
wrench




Level


# INSTALLATION

**STOP!** Peloton recommends professional installation of the Peloton Upright Wall Anchor, such as an appliance installer, handyman, or local hardware retailer. See the Location Requirements section of the Owner's Manual to make sure you will have enough clearance on each side of the Peloton Commercial Row.


- 1 Using a stud finder, locate a wooden stud with at least 36" of clearance on either side. Mark the center of the stud. (Wooden studs are usually 1.5 in/38.1 mm wide.)

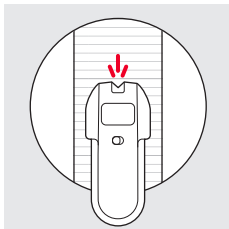

Using a pencil and measuring tape, make a mark in the center of the stud at 64 in/1.6 m from the floor.

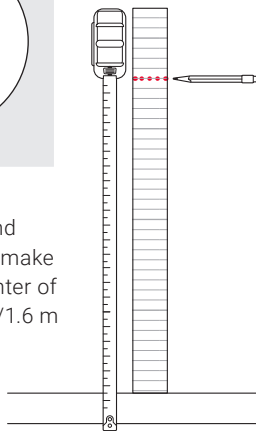


- 2 Hold the mounting bracket against the wall with the first mark at the center of the bottom hole. Use your level to make sure it is centered over the stud. Make another mark at the center of the top hole.

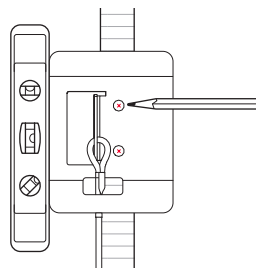


- 3 Drill two holes 3 in/76.2 mm deep through the drywall and wooden stud using a 6 mm drill bit.

**⚠ WARNING:** Do not drill near any electrical wires or water pipes.

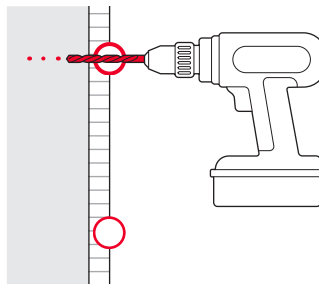


# INSTALLATION


- 4 Hold the mounting bracket and cable loop assembly against the wall and install the top 17 mm x 76 mm hex lag bolt using a socket wrench with a 17 mm hex socket. Do not fully tighten the bolt.

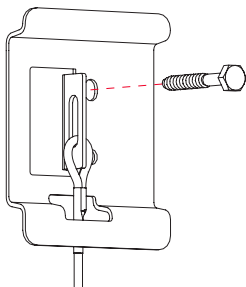

- 5 Install the second hex lag bolt. Use a level to confirm the mounting plate is straight. Fully tighten the hex lag bolts until the mounting bracket is firmly clamped against the wall.

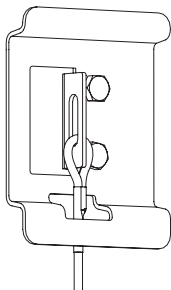

- 6 **A** Hook the bottom tab of the front cover under the bottom lip of the mounting bracket.  
**B** Push the top of the front cover until it clicks onto the top lip of the mounting bracket.  
**C** Tug on the mounting bracket to make sure it is secure.

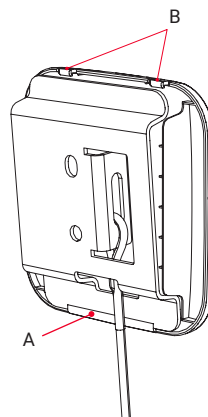

Your Peloton Upright Wall Anchor is ready for use. **Whenever you are not using the Upright Wall Anchor, make sure that the tether is wrapped around the mounting bracket.**



# STORING THE PELOTON COMMERCIAL ROW UPRIGHT

⚠ **WARNING: NEVER store the Peloton Commercial Row vertically without properly installing and using the Upright Wall Anchor. To avoid risk of serious injury, read and follow all instructions in the Upright Wall Anchor Guide.**

If you are not able to lift more than 40 lb / 18 kg over your head, get assistance in stowing, unstowing or moving the Row from someone who can.


Always verify that the Upright Wall Anchor is securely mounted to the wall and check for damage before using it.

For your safety, Peloton recommends having the Peloton Upright Wall Anchor installed by a professional such as a handyman, appliance installer, or local hardware retailer.


The Upright Wall Anchor is designed to be screwed into a load-bearing wooden stud only. Do not install into unsupported drywall, metal studs, or masonry.

# STORING THE PELOTON COMMERCIAL ROW UPRIGHT

- 1** Power off the Row and unplug it.
- 2** Tilt the monitor all the way down.
- 3** Move the seat all the way forward.  
Be careful not to pinch your fingers, as the seat moves freely.

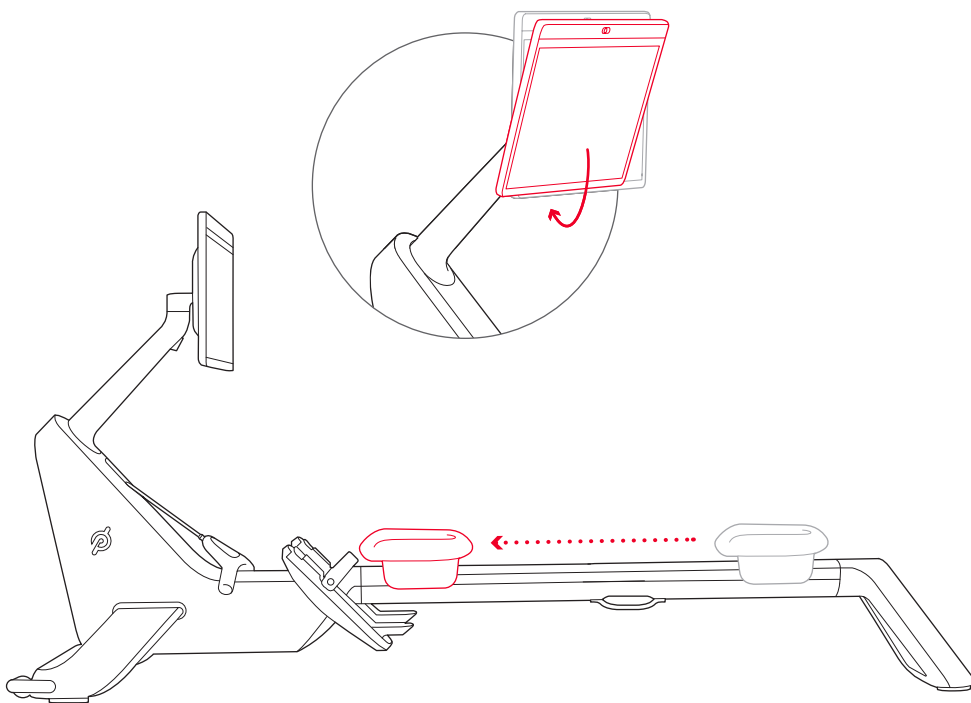

4 Press the monitor arm release button.

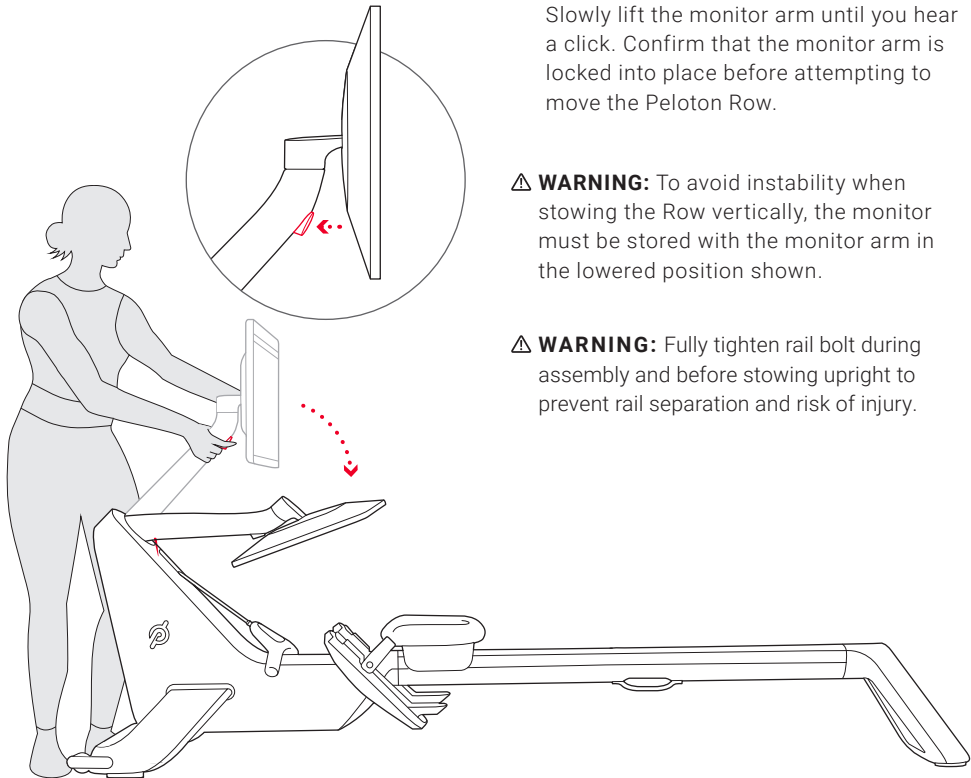


5 Carefully lower the monitor arm until it stops, and then release the button. Slowly lift the monitor arm until you hear a click. Confirm that the monitor arm is locked into place before attempting to move the Peloton Row.

⚠ **WARNING:** To avoid instability when stowing the Row vertically, the monitor must be stored with the monitor arm in the lowered position shown.

⚠ **WARNING:** Fully tighten rail bolt during assembly and before stowing upright to prevent rail separation and risk of injury.

# STORING THE PELOTON COMMERCIAL ROW UPRIGHT


- 6 Lift the rail foot until you can reach the rail handle. The wheels will engage, allowing you to roll it to the desired location.

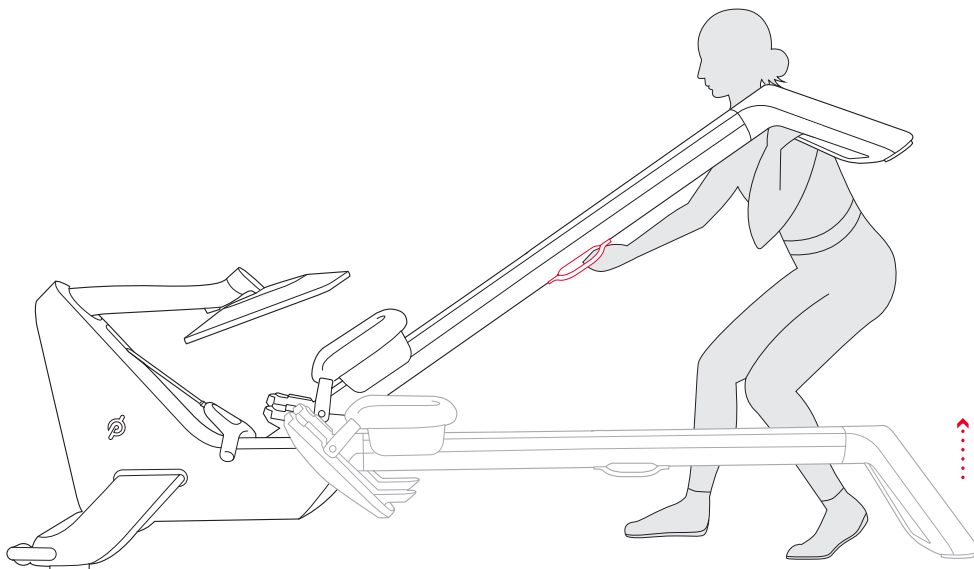

- 7 Center the Peloton Commercial Row in front of the Peloton Upright Wall Anchor.

When stowing the Row, carefully lift it until it is fully upright. Be careful to leave enough space between the Row and the wall so your Row doesn't collide with the wall when you're tipping it up. The rail foot and handle should be facing out.


**⚠ WARNING:** Never store the Peloton Commercial Row vertically on the Peloton Mat or any other mat. Always roll the Peloton Mat up with the logo facing out and store it where it will not be a tripping hazard.

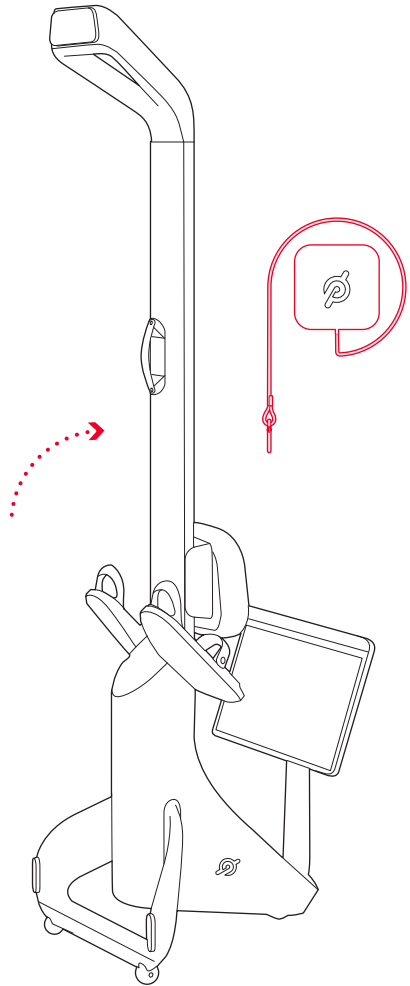

# STORING THE PELOTON COMMERCIAL ROW UPRIGHT

- 8** Unwind the tether and loop the tether and carabiner around the rail and through the rail handle.

Clip the carabiner to the tether.

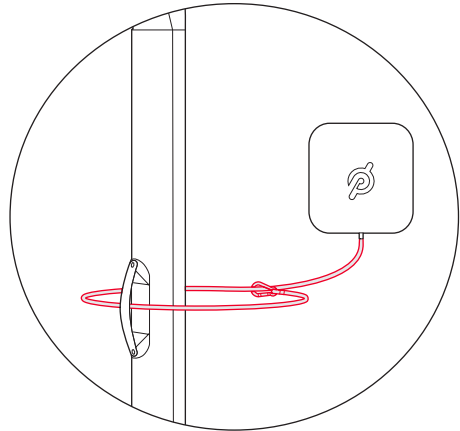

# MAINTENANCE AND CARE

## BEFORE EVERY CLASS


- Check the area around and underneath the Peloton Commercial Row for potential obstructions.
- Inspect the Peloton Commercial Row and do not use it if it appears damaged or inoperable.

## WEEKLY

- Check the power cord for damage.
- Check the entire Row for wear and damage, especially the handle strap and foot straps.
- Clean the area underneath the Row.
- Remove the front cover of the Upright Wall Anchor and verify that the tether is secured to the mounting bracket and not frayed, and that the bolts are secured to the wall.
- Clean all visible surfaces of the Row thoroughly using a damp cloth and a mild household cleaner diluted in water. Do not use harsh cleaning products containing bleach or ammonia.

## BEFORE STOWING THE PELOTON COMMERCIAL ROW UPRIGHT:

- Make sure the Accessory Tray is cleared of any items.

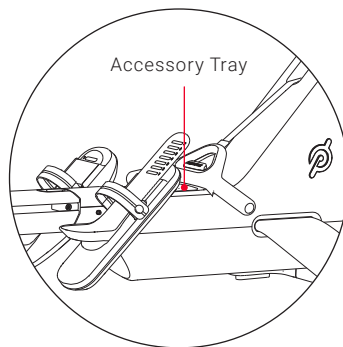

- Make sure that the Upright Wall Anchor is securely mounted to the wall and that the cord is not frayed or otherwise damaged. Always attach the Row to the Upright Wall Anchor when stowing vertically, and never stow vertically if the Upright Wall Anchor is not securely attached to the wall.



©Peloton 2023, Peloton Interactive, Inc. All rights reserved.

[commercial.onepeloton.com/support](https://commercial.onepeloton.com/support)

**RW01 | 40027966 1.0**